DAIICHI

Carseat Manual

Infant protection device for a car

● For the safety in using it ····· 1~5

Illustration of the indicative marks ····· 1
Usage conditions applicable for infants ····· 1
About the seat to which the safety seat will be attached ····· 2
About the seats to which the safety seat can not be attached ····· 2
Caution ····· 3~5

● Name of parts ····· 6

● How to operate ····· 7~9

Buckle releasing and locking ····· 7
How to use the angle adjusting lever ····· 8
How to use the locking lever ····· 9

● Before being fastened into the car ····· 10~11

How to seat an infant ····· 10
Height adjustment of the shoulder belt ····· 11
Height adjustment of the head seat ····· 12

● How to fasten the seat into the car ····· 13

Types of the car's seat belts to which the safety seat can be attached ····· 13
Decision on the direction of the installation ····· 13

● Rearward - Facing installation method ····· 14~16

● Forward - Facing installation method ····· 17~19

● How to remove the seat cover ····· 20

● How to use the shoulder pad exclusive for children ···· 21~22

● ISOFIX method ····· 23~24

Safety Information

- Before installing or using the product it is necessary to read these instructions carefully, because only a corredct installation and use quarantees an efficient protection

⚠ Danger — Do not use the product for the infants not qualified for the usage conditions, and for the seats that do not allow its installation. If not followed, in case of crash or abrupt stopping, infants may get bounced out of the car, or their heads may hit the glass, risking their lives or suffering serious damage.

Illustration of the indicative marks

- The marks below illustrate some instructions for you to follow in particular for the safety in using the product. They are relating to safety, so you should follow them.

⚠ Danger	If you do not follow, you may risk your life or suffer critical damage.
⚠ Warning	If you do not follow, you may suffer critical damage.
⚠ Caution	If you do not follow, you may suffer damage or an accident.
Completion check	The items that must be checked for safety are described.
Caution	Basic knowledge for using the product safely and pleasantly is described.

Usage conditions applicable for infants

- Do not use for the infants who can not meet the following conditions.

⚠ Important! — This seat has been designed to accomodate children from birth to weight of 18kg (which corresponds to an age of approx, 4 years)

Driving direction	Conditions applicable for infants		Other conditions
When Rearward - Facing is used.	● Weight ● Age	below 0kg ~ 11kg (Group0) New-born ~ 12months old	● Adjust the angle appropriately by using the angle adjuster
When Forward - Facing is used.	● Weight ● Age	below 11kg ~ 18kg (Group1) 12months ~ 4years old	● Make sure that the occipital region of the infant is not positioned off the backrest when the baby is seated.

● Installation — To install the seat in the car you have to use a 3-point-automatic belt appoved to ECE16 or equivalent standard.
(ECE = European Safety Equipment Standard)

About the seat to which the safety seat will be attached

- It needs to be attached as shown below. Use the car seat belt to attach it firmly.

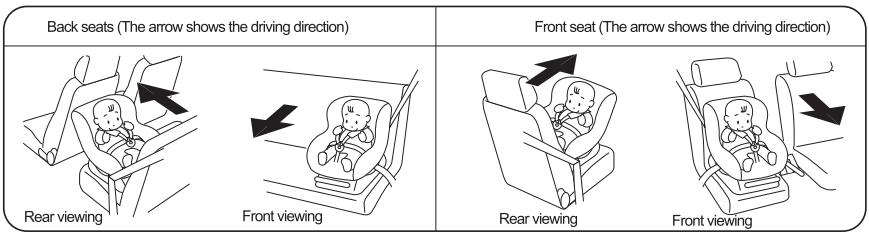
Back seats (The arrow shows the driving direction)
Front seat (The arrow shows the driving direction)
Rear viewing
Front viewing
Rear viewing
Front viewing

- The infant safety seat can be attached to the front seat or the back seats. However, it is recommended to attach it to the back seats where it is safer.

⚠Danger Do not use it for the passenger seat fitted with an airbag. When activated, the airbag may cause the infant to risk his or her life, or suffer serious damage.

⚠Danger When the product is used for the front seat in the rear-viewing mode and interferes with the driving, it should not be used.

About the seats to which the safety seat can not be attached

⚠Danger If the safety seat can not be attached according to the user manual, depending on the kinds of the seat belt of a car, and the t ypes of the seat, the safety seat needs to be attached to other seats. If the safety seat is not attached according to the user manual, the infant may risk his or her life, or suffering serious damage during the crash or the abrupt stopping.

- A seat without a seat belt (Impossible to fasten the infant safety seat)
- A seat with a 2-point seat belt (Impossible to fasten the infant safety seat)
- Do not place a child seat rear-facing in the front seat of a vehicle with a passenger air bag uniess deactivated DEATH OR SERIOUS INJURY can occur
- A seat with a seat belt located in the middle of a seat (Impossible to fasten the infant safety seat strongly) / Picture-1
- A seat with an airbag (When activated, the airbag may cause the infant to risk his or her life, or suffer serious damage)
- A seat placed sideways or opposite the driving direction (Difficult to absorb the crash impact)
- Seats whose width and length are less than 45cm (The attached safety seat will be made unstable)
- A seat that could interfere with driving when installed with the infant safety seat, or the front central seat (Difficult to secure the safety of people in the car)
- A seat whose buckle is highly placed, and to which the safety seat can not be fastened (The infant safety seat can not be installed) / Picture-2
- Other seats to which the safety seat can not be fastened

Picture-1

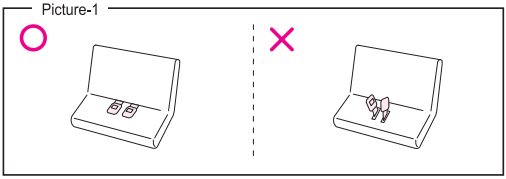

Picture-2

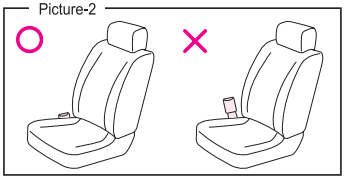

Caution The user manual needs to be kept well and read accordingly when necessary.

Danger

The infant safety seat needs to be attached according to the user manual. If the seat is attached inappropriately, the infant may be loosened from the car or hit the glass, for example, during the crash or the abrupt stopping, risking his or her life, or suffering serious damage.

If the safety seat can not be attached according to the user manual, depending on the kinds of the seat belt of a car, and the types of the seat, the safety seat needs to be attached to other seats. If the safety seat is not attached appropriately according to the user manual, the infant may risk his or her life, or suffering serious damage during the crash or the abrupt stopping.

Every time the infant is seated, the adjusting belt should be pulled to seat the baby tightly. If the shoulder belt can not function as originally designed, the infant may risk his or her life, or suffering critical damage.

The belt cover should be attached for use. If the belt cover can not function as originally designed, the infant may risk his or her life, or suffering critical damage.

If the infant safety seat is exposed to direct sunlight for long hours, metal and PVC parts may get heated. The guardian needs to check it before seating the infant. In summer or when sunlight is strong, the car needs to be parked in a shady lot, or a towel, for example, can be used for coverage.

An infant should not be left alone in a car. At noon, the temperature in side a car can rise, causing the infant to suffer dehydration, consequently, risk his or her life, or suffer serious damage.

The product should not be used for the seats with an airbag. When activated, the airbag may cause the infant to risk his or her life, or suffer serious damage.

Be careful not to allow the infant to push the press button of the front pad. The fastening plate needs to be checked for any loosening frequently. When the plate is loosened, the infant may risk his or her life, or suffer critical damage when a crash or an abrupt stopping occurs.

If the product suffers any crash or a strong impact, it should not be used again regardless of damage to its surface. The safety seat may not function as originally designed when a situation occurs, consequently causing the infant to risk his or her life, or suffer serious damage.

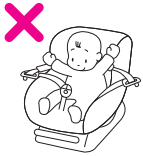

Using the safety seat without using the seat belt should not be allowed. The safety seat may not function as originally designed when a situation occurs, consequently causing the infant to risk his or her life, or suffer serious damage.

A guardian should get on the vehicle together considering that the infant may get caught in the belt on the neck or be placed in a dangerous situation, due to his or her various motions.

Warning

When the infant safety seat is installed on the passenger's seat, it may cause some interference, leading to inconvenience in operating the transmission gear or the side brake. When such inconvenience arises, you need to refrain from using the product for the passenger's seat, and rather use it for the back seats. When such inconvenience is caused, it may interfere with operating the transmission gear or the side brake, leading to a highly risky situation.

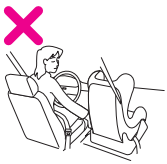

While driving, you should not operate the infant safety seat (Belt adjustment/ Angle adjustment, for example). The car should be parked in a safe place first before you operate the safety seat. If you operate the safety seat while driving, it is highly dangerous, because your driving will be interfered with, possibly leading to an accident.

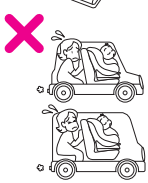

When there is a passenger in the back seat, the safety seat should not be fastened to the passenger seat of a 2-door or 3-door vehicle, or the secondary seat near the access area for ascending and descending in case of the one box type vehicle or a mini-van, in order to secure the emergency exit.

The infant safety seat should not be modified, or its cover and the urethane part should not be removed when the seat is used. The product should not be used in other ways rather than as described in the manual. The safety seat may not fully function when a situation occurs.

When there is no infant in the vehicle, the infant safety seat needs to be stored, for example, in the trunk, or fastened strongly within in a car. When fastened insufficiently, the safety seat may be shaking, causing interference with driving.

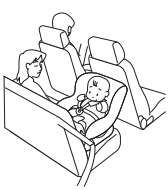

When using the product for a new-born baby (Younger than 1 month after birth), a fellow passenger, not just the driver, needs to get on the vehicle to pay attention to the baby. Avoid using the product for longer than one hour consecutively, in case of infants ranging from newborn babies to ones younger than 6 months, considering the burden on them.

Caution

When you need to ride together with an infant, you should check the attachment of the safety seat again before driving the vehicle. The safety seat needs to be checked for any problems during or after the driving (The vehicle should be parked in a safe place first before the checking).

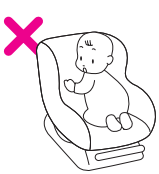

Be careful not to allow the infant to play on the safety seat. You should not allow the infant to use it as a play apparatus.

The safety seat should not be installed or removed while the infant is on it.

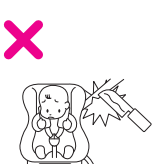

Be careful not to allow any sharpened objects to cause damage to the car seat belt and the infant safety belt. The belts may not function fully when a situation occurs. When there is a problem with the belts. You need to contact the selling shop for consultation.

Advice

It is recommended to use the back seats for installing the infant safety seat because they are safer.

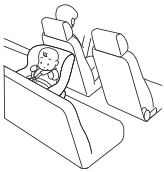

In case of the rear viewing mode, the shoulder belt will not cause any interference if the safety seat is installed on the seat behind the driver's seat.

* Installing it while standing on the car lane is dangerous. It is recommended to install the safety seat while standing on the sidewalk.

Accessories * The design of the inner seat could vary depending on products.

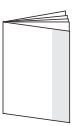

Manual

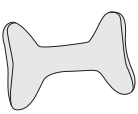

Side cushion

Inner seat

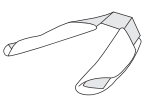

Shoulder pad

* Safe Keeping of Manual

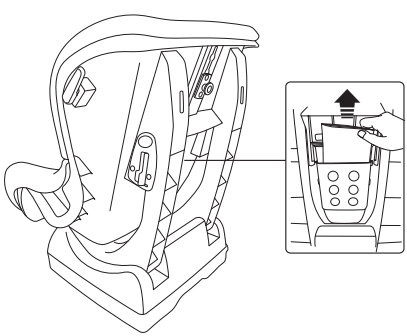

Keep the manual inside
a belt cover on a backside of the car seat.

* How to Use Side Cushion

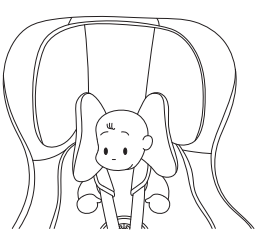

Side cushion is recommended for infants under 6 months.Position the cushion to support a child's head from both sides.

Name of parts

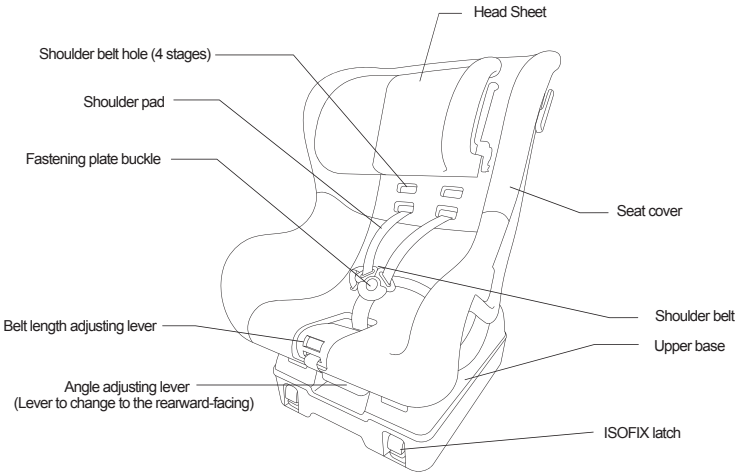

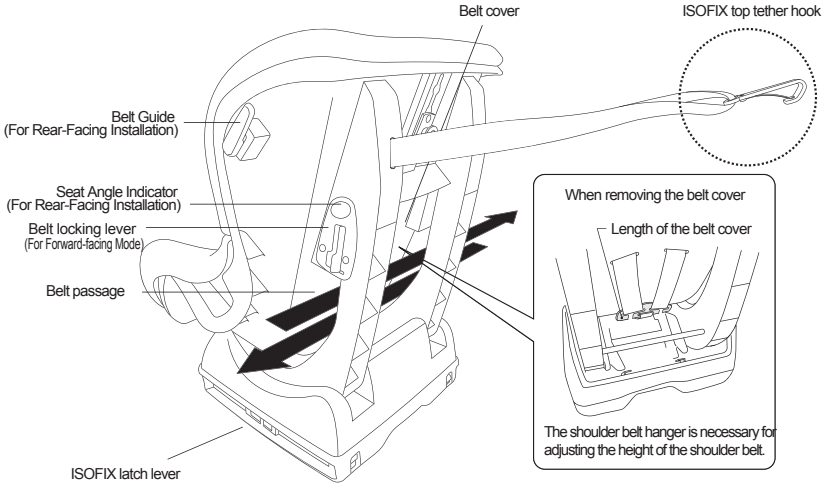
Belt cover
ISOFIX top tether hook
Belt Guide
(For Rear-Facing Installation)
Seat Angle Indicator
(For Rear-Facing Installation)
Belt locking lever
(For Forward-facing Mode)
Belt passage
ISOFIX latch lever
When removing the belt cover
Length of the belt cover
The shoulder belt hanger is necessary for adjusting the height of the shoulder belt.

How to operate

Buckle releasing and locking

⚠Warning Individual functions should be operated while the care is parked. If you operate them while you drive, it may interfere with driving, possibly leading to an accident.

⚠ Danger Using the infant safety seat while its buckle is released is dangerous,so it should not be allowed in any way.

Releasing

1

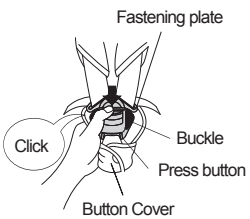

Take out the fastening plate by pushing the press button within the buckle of the front pad.

2

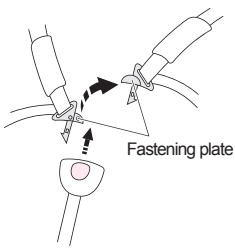

Separate the fastening plate consisting of 2 parts into the upper and lower units.

Locking

1

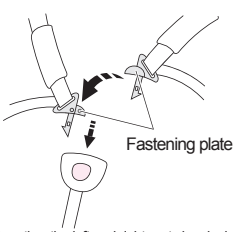

Put together the left and right parts by placing them into the upper and lower positions individually.

2

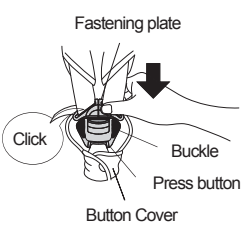

Insert the united fastening plate into the buckle until there is a “Click” sound.

3

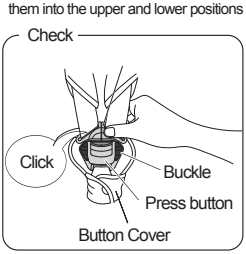

The fastening plate should be checked for its locking.

How to use the angle adjusting lever

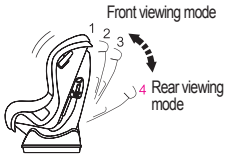

- The angle can be adjusted in four stages, with the 1st ~ 3rd stages for the front viewing mode, and the 4th stage for the rear viewing mode.
- In case of the front viewing mode, the safety seat's angle needs to be adjusted according to the angle of the car seat to which the safety seat will be fastened.

Angle adjustment for Rearward - facing mode

Applicable Weight Below 13kg

In case of the rear viewing mode for the infant safety seat, it can be adjusted to the 4th stage.

1

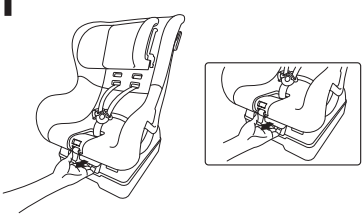

Lever to change to the rearward facing mode
The angle adjusting lever needs to be pulled for pushing it backwards

2

Lay it down to the 4th stage (The lowest laying position). (Refer to the arrow on the main body for checking the position of the angle adjustment)

Angle adjustment for Forward - facing mode

Applicable Weig Below 9kg ~ 18kg

In case of the Forward - facing for the infant safety seat, it can be adjusted in 3 stages ranging from 1st ~ 3rd.

1

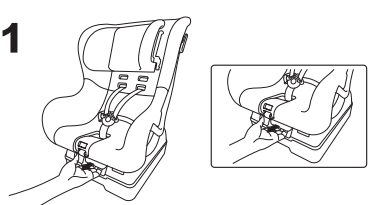

Lever to change to the Forward - facing mode
The angle adjusting lever needs to be pulled for pushing it backwards

2

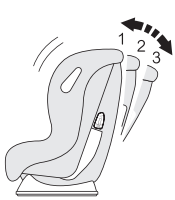

Adjust the angle of the product to one of the 3 stages according to the angle of the car seat (Refer to the arrow on the side of the main body).

How to use the locking lever

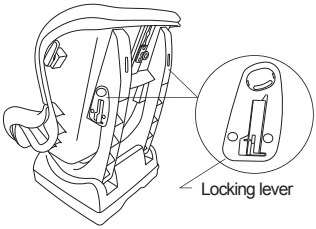

- The locking lever is a device to attach the infant safety seat into the car firmly. It should be used.
- There are 2 locking levers, located at the right and left side individually. Use the product according to the attachment position.

⚠ Danger The locking lever and the belt guide are used to attach the infant safety seat by using the car seat belt. They should be used. If they are not used, the safety seat may not be fastened when an impact or an abrupt stopping occurs, possibly leading to a dangerous situation.

⚠ Danger Before using the product, it should be checked whether it can be attached onto your car seat (Refer to About the Seats to Which the Safety Seat Can Not Be Attached on page 2). Even when the safety seat can not be installed as described in the user manual, you should not use any forceful measures to fasten it. The safety seat may not function fully when a situation occurs, possibly causing an accident unexpectedly.

⚠ Caution While operating the locking lever, you should be careful not to get your hands or fingers caught in it.

Locking

1

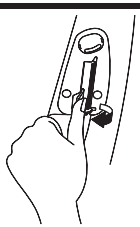

Slide the locking lever sideway to unlock.

2

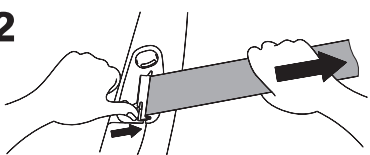

Insert the car shoulder strap through the locking lever and slide the lever to the opposite side to lock it while pulling the strap tightly.
Position the strap under the lever and push the lever all the way to securely hold the strap.

3 ⁎ In case of the rearward facing mode only

As indicated above, fix the belt with the locking lever and hang it to the belt guide while pulling it tightly.

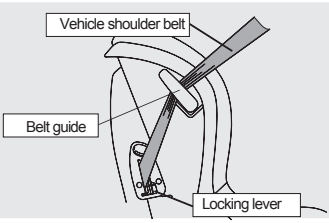

Releasing

1

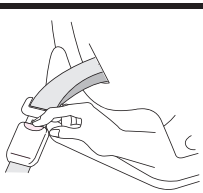

Release the car buckle

2

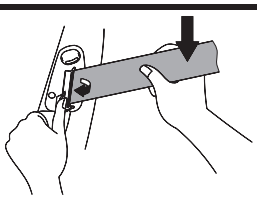

Slide the locking lever to unlock, and release the car shoulder strap.

Before being attached into the car

How to seat an infant

Each part needs to be adjusted to be suitable for the body of the infant before being attached into the car.

⚠ Danger Every time when an infant is seated, the adjusting belt should be pulled to seat the baby tightly. If the shoulder belt can not function as originally designed, consequently, the infant may risk his or her life, or suffering critical damage.

Seating the infant

1

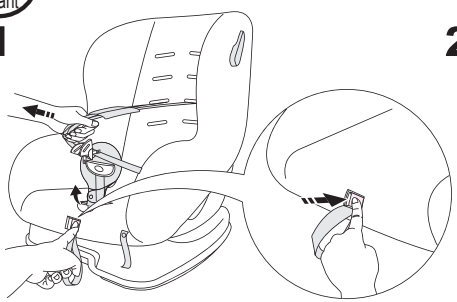

The buckle of the front pad needs to be released first, the, the belt adjusting lever needs to be finger-pressed while pulling and loosening the shoulder belt (Refer to Buckle Releasing and Locking on page 7)

2

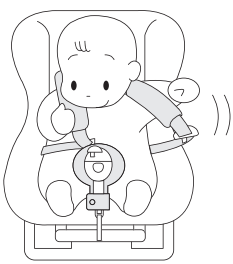

After the infant is seated, the shoulder belt needs to be put on. At that time, the height of the shoulder belt needs to be adjusted to fit the height of the infant's shoulder (Refer to Height Adjustment of the Shoulder Belt on page 11)

3

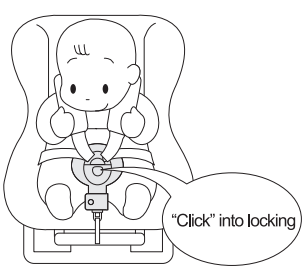

Lock the buckle of the front pad (Refer to Buckle Releasing and Locking in the page 7)

4

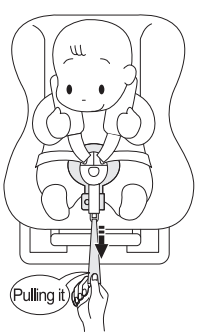

The adjusting belt needs to be pulled to fasten the shoulder belt tightly.

When adjusting the shoulder belt, it is recommended to keep a space enough to allow a hand (Unfolded) of an adult to pass through between the infant chest and the shoulder belt.

Advice

Completion check

- Are the buckle and the fastening plate firmly locked?
- Is there any twisting in the shoulder belt and the adjusting belt?
- Is the adjusting belt securely locked?
- Is the shoulder belt firmly tightened over the infant?
- Is the shoulder belt correctly attached onto the shoulder belt hanger?
- Is the shoulder belt put on correctly to place the infant's pelvis in a stable position?

Height adjustment of the shoulder belt

The shoulder belt needs to be adjusted in its position suitably for the body of the infant.

⚠ Danger The shoulder belt should be adjusted in its position suitably for the body of the infant. The safety seat may not function fully when a situation occurs.

* Note The shoulder strap comes in 2 positions upon the product shipment. Adjust the height of the shoulder strap depending on a child's sitting height.

Adjustment

1

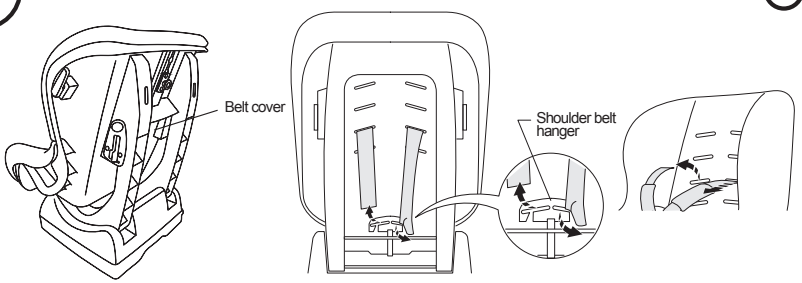

After the belt cover at the back side of the main body is removed, the shoulder belt needs to be pulled from the shoulder belt hanger.

2

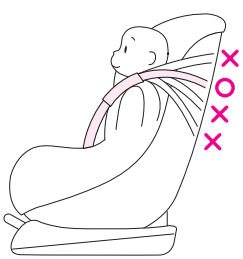

⚠ Caution When the shoulder belt can not be seen, the belt at the front side needs to be pulled by referring to "How to Seat an Infant" on page 10'. Then, the shoulder belt hanger will come out at the back side, making it possible to adjust the height of the belt.

After seating the infant, the belts need to be inserted through the holes at the most appropriate height for the infant's shoulders.

In case of the front viewing mode - Holes that are seemingly positioned a little higher.
In case of the rear viewing mode - Holes that are seemingly positioned a little lower.

3

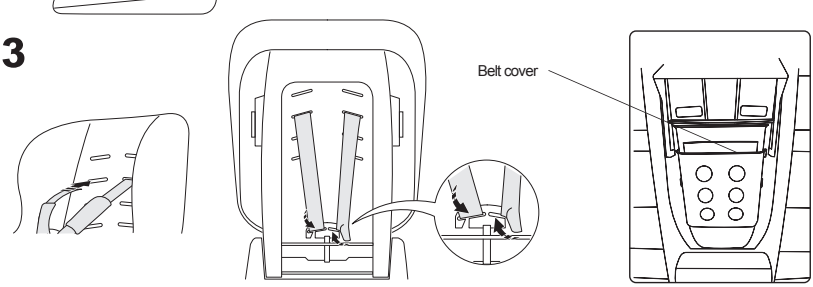

⚠ Danger Every time an infant is seated, the adjusting belt should be pulled (Refer to How to Seat an Infant on page 10) to seat the baby tightly. If the shoulder belt can not function as originally designed, consequently, the infant may risk his or her life, or suffering critical damage.

⚠ Danger The belt cover should be attached and used. If the belt cover can not function as originally designed, the infant may risk his or her life, or suffering critical damage.

Headrest Adjustment

* Note For easy operation, insert the shoulder strap through the hole on the backrest cover.
The headrest and shoulder strap move together from the 2nd position of the backrest height.

Adjustment

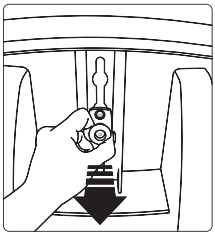

1. Pull the head adjustment lever forward on the back of the car seat to adjust up and down.The headrest can be adjusted to 4 positions.

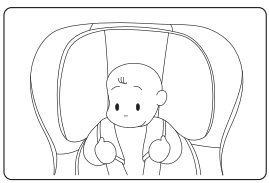

2. The bottom of the headrest should be aligned close to infant's shoulders.

⚠Caution

The position of the headrest must be adjusted appropriately to infant's body.
If failed to do so, the safety seat may not deliver sufficient effects.

How to Finish Back Covering

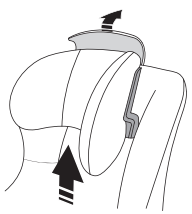

Flip up the top edge of the backrest covering when adjusting the headrest. (from the 3rd position)

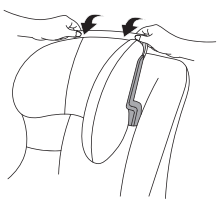

Roll the flipped edge of the covering inward.

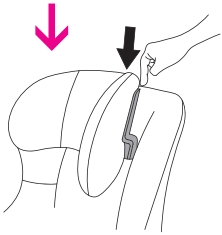

Slide the covering into the space between the backrest and headrest to neatly finish the covering.

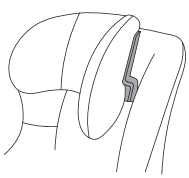

Finished covering

How to attach the seat into the car

Types of the car seat belts to which the safety seat can be attached.

First of all, the types of the car seat belt need to be checked.

- This equipment can be used for the 3-point seats that do not have a recoiling device or have a seat belt fitted with a recoiling device.
- This equipment can not be attached for the 2-point seat belts.
- There are different seat belts for different vehicle models. Their features are different and the installing methods are also various. In order to use the infant safety seat correctly and safely, the safety seat needs to be fastened in a way suitable for your vehicle (Seat belt).

	Features	Caution when installing the product	Installation
ELR-ALR mounted 3-point seat belt (Belt locking device that can fasten the infant safety seat)	Normally, the belt functions as an ELR belt. When it is pulled to the end, it will shift to the ALR function, allowing the belt to be recoiled automatically. When the belt is recoiled to the end, it will change to the ELR function.	The infant safety seat needs to be fastened firmly and the belt needs to be pulled to the end, allowing the belt to shift to the ALR function. ⚠Caution When the seat needs to be installed, you need to refer to the user manual of the car to which the safety seat will be attached.	○
ALR point type seat belt (Belt locking device that can be locked automatically)	When you stop in the middle of pulling out the belt, the belt will be locked automatically, not allowing it to be pulled further.	In order to fasten the infant safety seat, the belt should be pulled at once to the length necessary for fastening. The safety seat needs to be fastened firmly by using the locking lever	○
ELR mounted 3-point seat belt (Belt locking device that can be locked automatically)	Normally, the belt can be released and recoiled freely. When the seat detects an impact (Including an abrupt stopping), the belt will be locked at the current position, without any loosening.	The safety seat needs to be fastened firmly by using the locking lever	○
ELR mounted seat belt	ELR mounted seat belt without a car's shoulder belt	The safety seat can not be fastened firmly.	✕
NLR point type seat belt (Belt locking seat belt that is not to be locked)	There is no locking function. Its length needs to be adjusted while it is pulled to the end.	The safety seat can not be fastened firmly.	✕
Fully automatic seat belt	The seat belt will be put on automatically when the front seat is taken and the door is closed. When the door is opened, the seat belt will be removed automatically.	The safety seat can not be fastened firmly.	✕
NR 2-point seat belt (Manual)	Seat belt without a recoiling device	The safety seat can not be fastened firmly.	✕
Others	All kinds of seat belts not described in the table	The safety seat can not be fastened firmly.	✕

⚠ Danger The infant safety seat should not be used when it can not be installed firmly according the kinds of the seat belt of a car, and the types of the seat. If the safety seat is attached in appropriately, the infant may risk his or her life, or suffer serious damage during the crash or the abrupt stopping.

Decision on the direction of the installation

* The direction of the installation needs to be decided according to the weight of the infant.

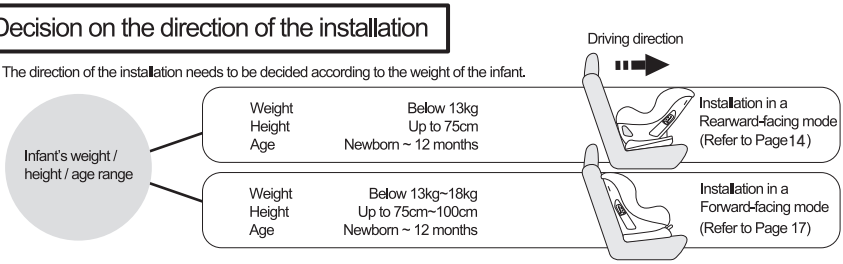
Infant's weight / height / age range
Weight Below 13kg
Height Up to 75cm
Age Newborn ~ 12 months
Weight Below 13kg~18kg
Height Up to 75cm~100cm
Age Newborn ~ 12 months
Driving direction
Installation in a Rearward-facing mode (Refer to Page14)
Installation in a Forward-facing mode (Refer to Page 17)

How to install 1 Rearward Facing

Newborn babies ~ 12 months old

Opposite the driving direction (Rear viewing)

Fasten by using the 3-point seat belt for a car

Applicable Weight Below 13kg
Height Up to 75cm

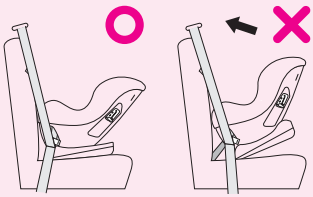

The shoulder belt needs not to be rolled up more than needed.

⚠ Danger The attachment and fastening methods may vary depending on the kinds of the seat belt of a car. Refer to Types of the Car's Seat Belts to Which the Safety Seat Can Be Attached on page 12 to fasten the infant safety seat correctly.

⚠ Warning In case of ELR/ALR mounted 3-point seat belt, after the safety seat is attached, the seat belt needs to be pulled to the end, allowing the seat belt to change to the ALR function.
The shoulder belt needs not to be rolled up more than needed (The →direction in the picture on the left). When the shoulder belt is rolled up too much, the safety seat needs to be fixed again.

⚠ Caution When you operate the locking lever, you should be careful not to get your hands or fingers caught.

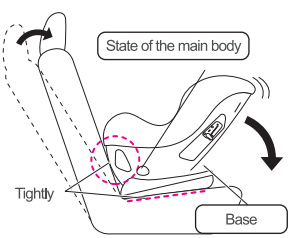

- The back rest needs to be made upright
- Adjust the height of the shoulder strap and headrest appropriately to infant's body. (See the shoulder strap and headrest adjustment on page 11 & 12.)
- The main body needs to be adjusted to the stage 4 by using the angel adjuster. (Refer to How to Use the Angle Adjusting Lever on page 8)
- The main body needs to be made tight against the backrest in the opposite direction of the driving direction.
- The base of the infant safety seat needs to be placed tightly onto the car seat.
- The angle needs to be adjusted sufficiently to allow the ball of the angle indicator to move into the safe zone completely (Refer to the angle indicator as below).

Angle indicator

- It is used to install the safety seat in a correct angle for the rear viewing method for the infants ranging from newborn babies to 12 months old ones (Adjust it while the car is on a level area).

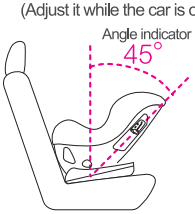

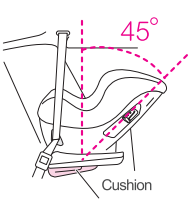

- For the infants ranging from newborn babies to 12 months old ones, the angle appropriate for using the safety seat safely and pleasantly in a rear viewing mode is about 45 degrees. In order to keep the angle of the safety seat at 45 degrees, the angle needs to be adjusted to allow the colored part (Blue one) of the angle indicator to move into the safe zone completely (Adjust it while the car is on a level area).

※ When the colored part is not within the safe zone, adjustment needs to be made by placing something like cushion under the main body.

1

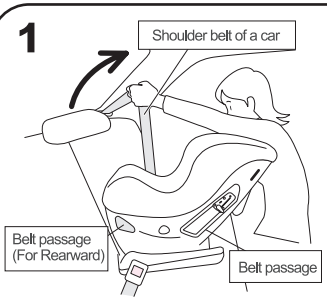

- After the car seat is pushed tightly against the backrest of it, you need to make the seat belt of the car come out by pulling it.

⚠ Danger The safety seat may not be fixed and fastened depending on the types of the waist belt of a car.
Refer to Types of the Car Seat Belts to Which the Safety Seat Can Be Attached on page 12 to fasten the infant safety seat correctly.

2

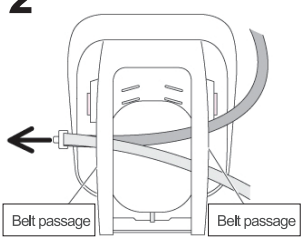

- The detached seat belt and fastening plate of a car need to be put through the belt passage along the backside of the main body.

⚠ Caution Be careful not to cause the waist belt of the car to be twisted.

3

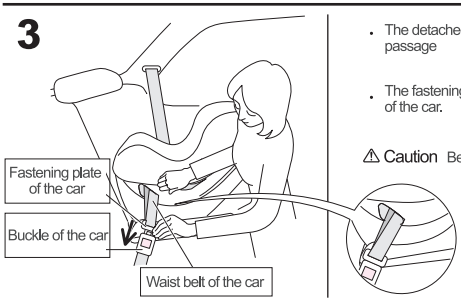

- The detached waist belt of the car needs to be put through the belt passage
- The fastening plate of the car needs to be inserted into the buckle of the car.

⚠ Caution Be careful not to cause the waist belt of the car to be twisted.

4

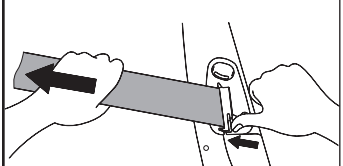

1. Slide the locking lever on the other end of the vehicle mounting plate sideway to unlock.
2. Insert the car shoulder strap through the locking lever and slide the lever to the opposite side to lock it while pulling the strap tightly. (Position the strap under the lever and push the lever all the way to securely hold the strap.)

⚠ Caution The waist belt of the car needs to be pulled as much as possible to fasten it firmly without any shaking.

5

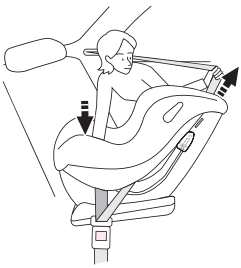

slide the strap locking lever sideway and press down to fasten it while pulling the strap tightly using your body weight from above the car seat after checking if the car shoulder strap is properly inserted through the locking lever.

6

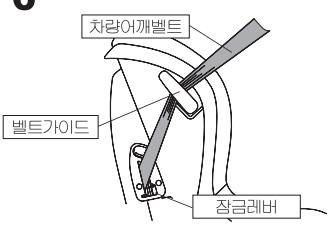

Hang the car shoulder strap to the belt guide for dual fix of the strap initially fastened with the locking lever.
(See how to use locking lever and belt guide on page 9.)

● Diagram to show the installation in the car

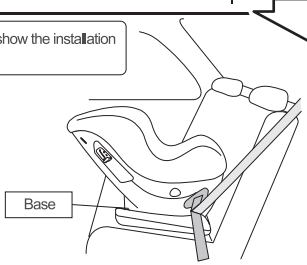

● Diagram to show the installation in the car

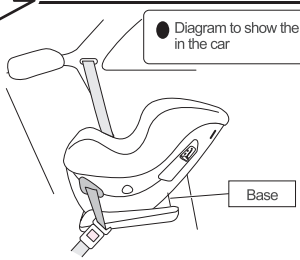

Completion check

* Should be checked after completion

- Is the height of the shoulder belt appropriate for the infant safety seat?
- Are the fastening plate and the buckle of the car firmly locked?
- Is there any twisting in the waist belt of the car?
- Is the seat belt of the car adjusted enough to be strongly tight?
- Is the shoulder belt of the car securely locked inside the set clip?

After checking the items shown above

The main body fastened to the seat belt of the car needs to be shaken to see if the safety seat's bottom is shaken within about 3cm.

● If the shaking range is larger than 3cm, the safety seat needs to be reinstalled again according to the installation procedure.

How to install ② Forward Facing

Group I **In the driving direction** (Front viewing)

Fasten by using the car's 3-point seat belt

Applicable Weight Below 9kg~ 18kg

⚠ Danger	The product should not be used for the seats with an airbag. When activated, the airbag may cause the infant to risk his or her life, or suffer serious damage.
⚠ Warning	When the infant safety seat is installed on the passenger's seat, it may cause some inconvenience in operating the transmission gear or the side brake. When such inconvenience arises, you need to refrain from using the product for the passenger's seat, and rather use it for the back seats. When such inconvenience continues, it may interfere with operating the transmission gear or the side brake, leading to a highly risky situation.
⚠ Warning	When installed onto the front seat, the infant safety seat may block the rear vision of the door mirror of the car. In that case, the safety seat needs to be installed onto other seats.
⚠ Warning	When there is a passenger in the back seat, the safety seat should not be attached to the passenger seat of a 2-door or 3-door vehicle, or the secondary seat near the access area for ascending and descending in case of the one box type vehicle or a mini-van, in order to secure the emergency exit.
Advice	When you operate the locking lever, you should be careful not to get your hands or fingers caught.

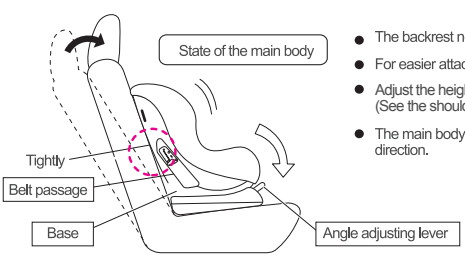

- The backrest needs to be made upright
- For easier attachment, the car's front seat needs to be pushed backwards
- Adjust the height of the shoulder strap and headrest appropriately to infant's body. (See the shoulder strap and headrest adjustment on page 11 & 12.)
- The main body needs to be placed in the Forward facing position in the driving direction.

1

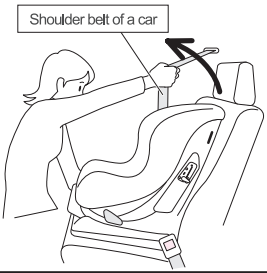

· You need to make the seat belt of the car come out by pulling it.

⚠ Danger The attachment and fastening methods may vary depending on the kinds of the seat belt of a car. Refer to Types of the Car's Seat Belts to Which the Safety Seat Can Be Attached on page 12 to fasten the infant safety seat correctly.

2

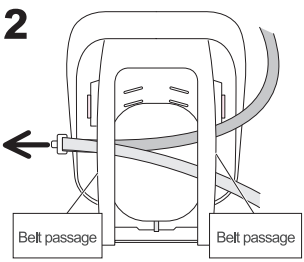

· The detached seat belt and fastening plate of a car need to be put through the belt passage along the backside of the main body.

⚠ Caution Be careful not to cause the waist belt of the car to be twisted.

3

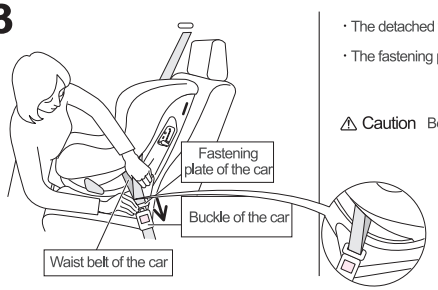

· The detached waist belt of the car needs to be put through the belt passage.

· The fastening plate of the car needs to be inserted into the buckle of the car.

⚠ Caution Be careful not to cause the waist belt of the car to be twisted.

4

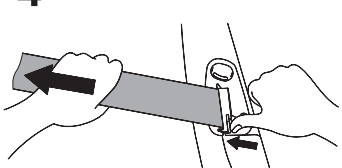

1. Slide the locking lever on the other end of the vehicle mounting plate sideway to unlock.
2. Insert the car shoulder strap through the locking lever and slide the lever to the opposite side to lock it while pulling the strap tightly. (Position the strap under the lever and push the lever all the way to securely hold the strap.)

⚠ Caution The waist belt of the car needs to be pulled as much as possible to fasten it firmly without any shaking.

5

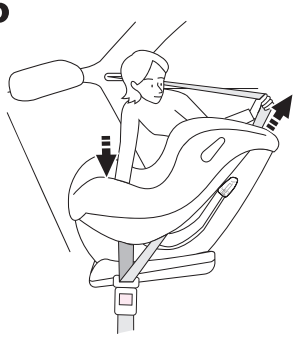

Check the car shoulder strap is properly inserted through the locking lever.
If the car seat is shaking, slide the locking lever sideway and press down to lock it while pulling the strap tightly using your body weight from above the car seat.

● Diagram to show the installation in the car

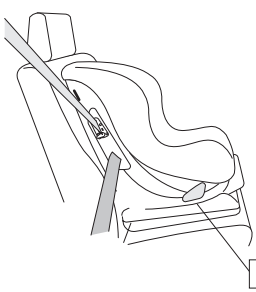

● Diagram to show the installation in the car

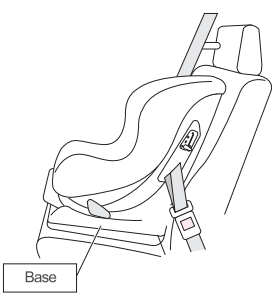

Completion check

※ Should be checked after completion

- Is the height of the shoulder belt appropriate for the infant safety seat?
- Are the fastening plate and the buckle of the car firmly locked?
- Is there any twisting in the waist belt of the car?
- Is the seat belt of the car adjusted enough to be strongly tight?
- Is the shoulder belt of the car securely locked inside the locking lever?

After checking the items shown above

The main body fastened to the seat belt of the car needs to be shaken to see if the safety seat's bottom is shaken within about 3cm.

● If the shaking range is larger than 3cm, the safety seat needs to be reinstalled again according to the installation procedure 1~5

How to remove the seat cover

⚠ Warning The front pad and the main body should not be disassembled. It may cause malfunctioning.

* Follow the direction conversely when covering the seat.

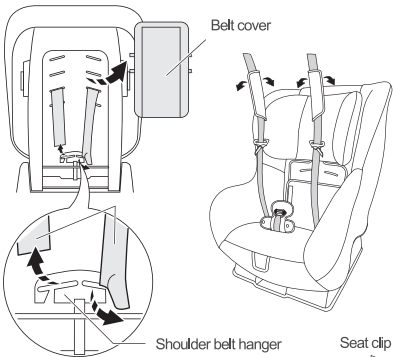

1 After the belt cover at the back side of the main body is removed, the shoulder belt needs to be taken off from the shoulder belt hanger. The removed belt needs to be taken out through the shoulder belt hole.
The shoulder pad and the fastening plate need to be taken out from the shoulder belt.

⚠ For your information
When the shoulder belt hanger can not be seen
It is because the shoulder hanger is pushed inside.
In that case, while you push up the shoulder belt adjusting lever (Refer to Page 10 and Page 11), you need to extend the shoulder belt. Then, the shoulder belt hanger at the back side will come up to be seen

2 Pull out the shoulder strap, and untie the elastic on the back of the head covering to remove.

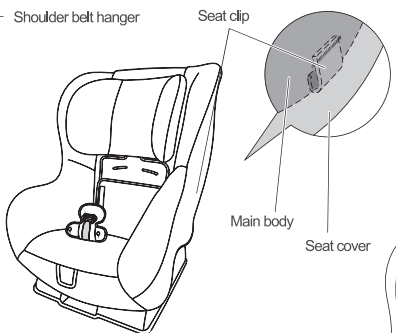

3 The button of the adjusting belt needs to be removed, and the seat clip of the seat cover needs to be taken off.

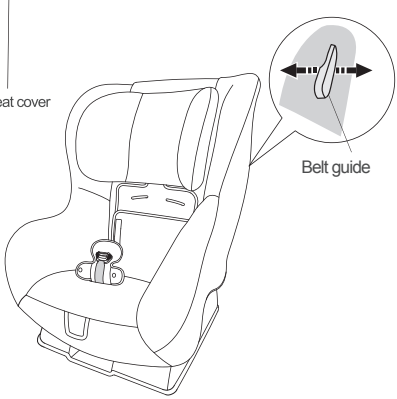

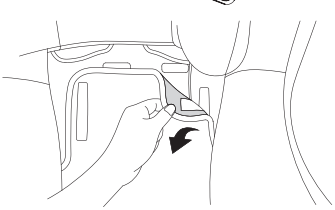

4 Remove back covering by detaching velcro on the back of the covering.
* Remove the back covering from the bottom.

5 Spread the covering left and right to get around the belt guide.

⚠ **경고**"봉재물 전면에 부착되어 있는 경고라벨(노란색라벨)은 탈착할 수 없습니다.
만일 탈착시, 당사에서는 책임지지 않습니다.

How to use the shoulder pad exclusive for children

* Shoulder pad for children is used for front-facing installation over 9kg.

Adjustment

1 Detach existing shoulder pad.
Pull out the shoulder strap through a shoulder strap adjusting gear on the back of the car seat. (See P.11)
Pull out the shoulder strap from the shoulder pad.

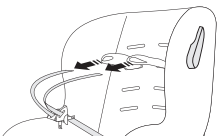

2 after measuring the optimal height for the shoulder of a child by seating him or her on the seat.
(Refer to the following pictures).

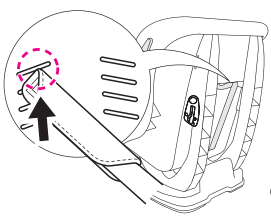

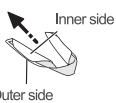

Installation needs to be done by setting the shoulder belt at the same height of the shoulder of a child or higher

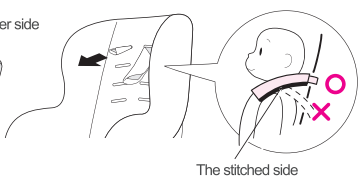

Advice

It can be put through smoothly when being inserted using the folded part as shown in the dotted circle.

⚠ Warning The installation needs to be made in a way that the rubber side should be placed tightly against the infant.

⚠ Caution The both shoulder pads, right and left, should be adjusted in the same height.

- The shoulder pad has an inner side and an outer side.
- The front side of the shoulder pad has cloth while the reverse side has rubber.

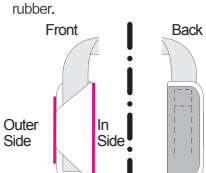

3

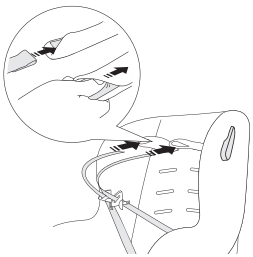

The shoulder belt needs to be inserted through the shoulder pad.

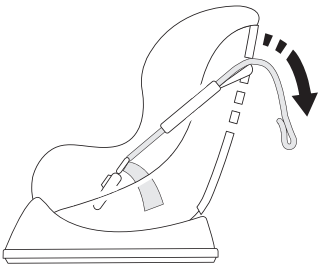

The shoulder belt of the infant safety seat inserted with the shoulder pad needs to be inserted into the shoulder belt hole at the backrest.

Advice

When the shoulder belt is pushed in slowly using a thumb

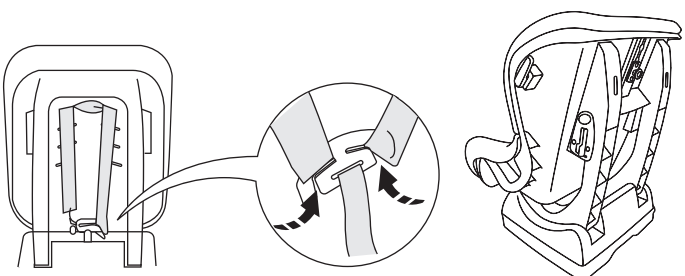

After the shoulder belt is inserted into the shoulder belt hanger, the belt at the back side of the main body needs to be inserted.

⚠ Caution The shoulder belt, or the adjusting belt, needs to be installed into the shoulder belt in a way that no twisting occurs.

⚠ Warning After the infant is seated onto the seat, the adjusting belt should be pulled to position the infant tightly by referring to <How to Seat an Infant> on page 10.
The shoulder belt may loose the original function in a situation, causing people to risk their l ives, or suffer serious damage.

⚠ Warning The belt cover should be inserted for use. The shoulder belt may loose the original function in a situation, causing people to risk their lives, or suffer serious damage.

Completion diagram

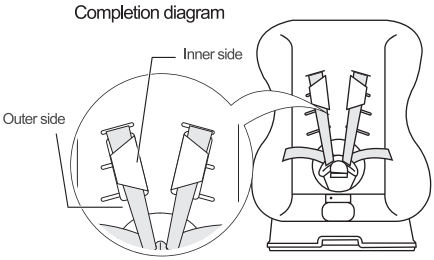

ISOFIX Installation (Optional)

Advice

* This device can be used in vehicles designed to fit ISOFIX.
* ISOFIX is an international standard fastener for child safety equipment installation for a vehicle that securely protects infants through the direct connection to the vehicle.

How to Fasten & Release Bottom Latch

Fasten

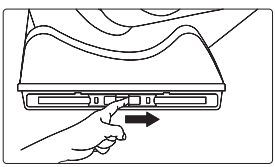

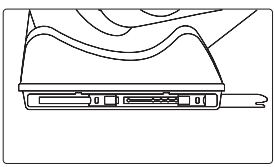

Pull the stopper lever in the front edge of ISOFIX base of the car seat forward from the both sides, and then push the lever out of the ISOFIX base.

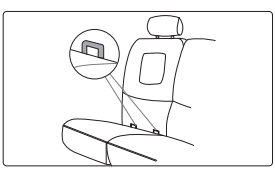

After aligning latches to anchors on the both sides, push the car seat to securely fasten.

If it is difficult to connect the latches, try connecting the latches by slightly rocking the car seat side to side after aligning the latches to the anchors.

[Important]

1. The side of a latch will be marked "GREEN" if it is firmly fastened. If the indicator is "RED" instead of "GREEN", try re-fastening again.
2. If the indicator is marked "GREEN", pull the car seat forward to check the Latch is firmly fastened.

[Note]

LATCH is a car seat fastener for infants that can be fastened to a fixed anchor between the backrest and the seat on the back seat of a vehicle.

ISOFIX Installation (Optional)

Release

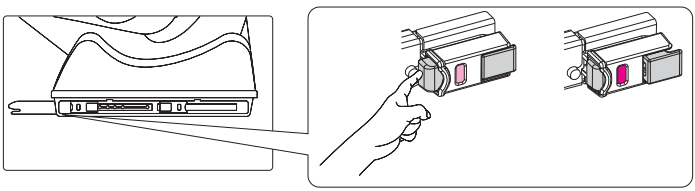

Release the latch by pulling the car seat forward while pressing the latch lever on the opposite side of the fixed control lever.

How to Connect Upper Tether

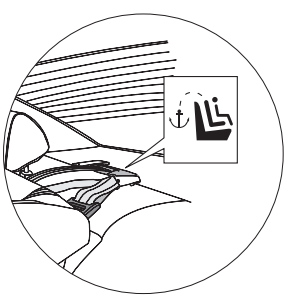

* The mark in the picture on the left is located on the top edge of the rear seat backrest if the vehicle is designed to fit ISOFIX.

1. Pull the webbing while pressing the length adjustment button(red part) for upper tether, and hang the tether hook to the tether hanger behind the car seat.
2. Tightly pull the tether belt to keep the webbing tight to minimize the gap.

[Note]

Use rear-facing installation procedure for front-facing ISOFIX installation.

After Installation

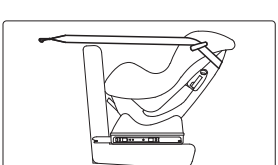

Rear-Facing Installation

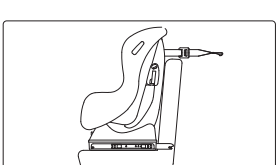

Front-Facing Installation

82-2 Wunjeong 4(sa)-gil, Paju-City, Gyeonggi-do, Korea (413-837)

Tel. : +82-31-942-4324
Fax. : +82-31-942-4326